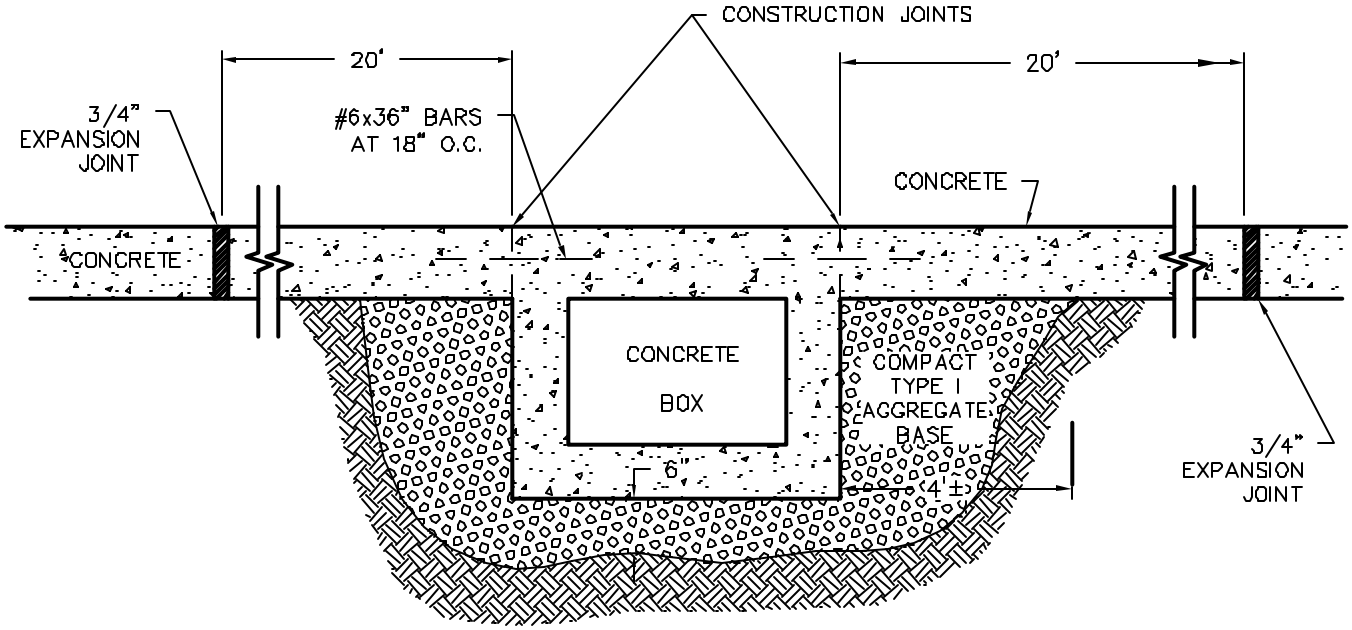

APPROACH TO CULVERT

CONCRETE PAVING

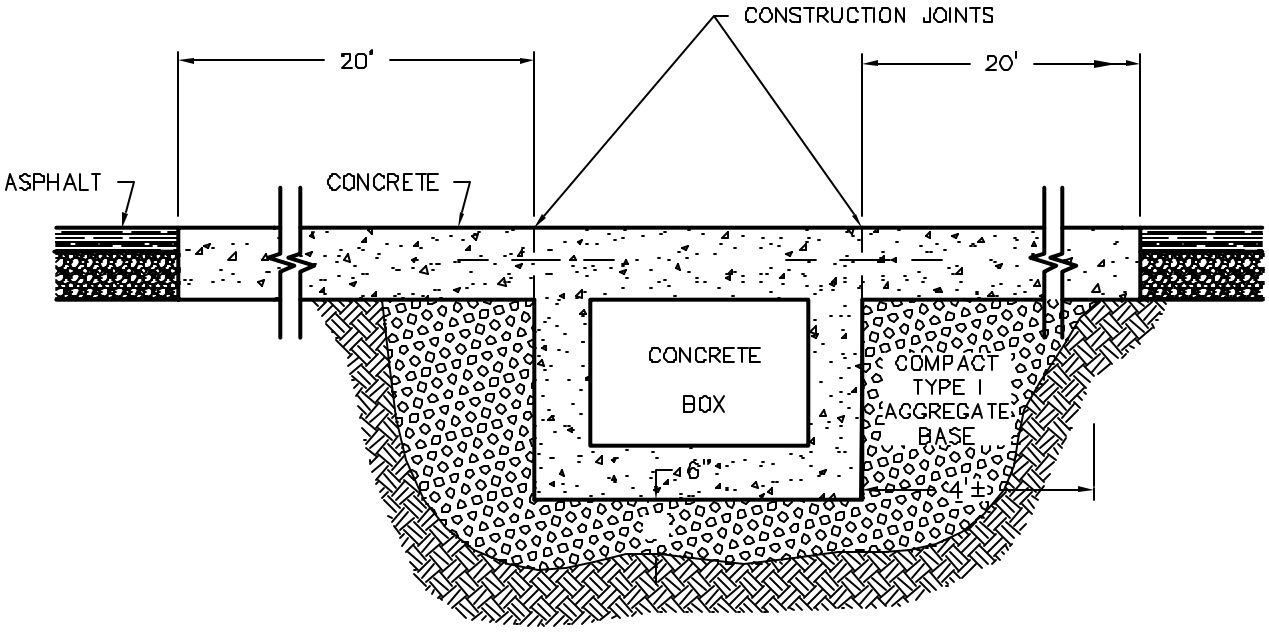

APPROACH TO CULVERT

ASPHALT PAVING

NOTE: PLACE 4' CLAY CAP ON STREET SIDE SLOPES AT EDGES OF CULVERT.

DEPARTMENT OF PUBLIC WORKS SPRINGFIELD, MO.	APPROACH TO BOX CULVERTS	ADOPTED: SS-11